문의사항이 있으시면 소비자상담실로 연락주시기 바랍니다.

소비자 상담실
(KR) 080-920-6000(수신자 부담)

If you should require further assistance, please call our Consumer Service line.

Helpline
(UK) **0 800 783 7010**

Helpline
(IE) **1 800 509 448**

D20.514.2
D20.535.3

Type 3757

99662102/IX-10
Korea/GB

Internet:
www.oralb.com
www.braun.com
www.service.braun.com

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany

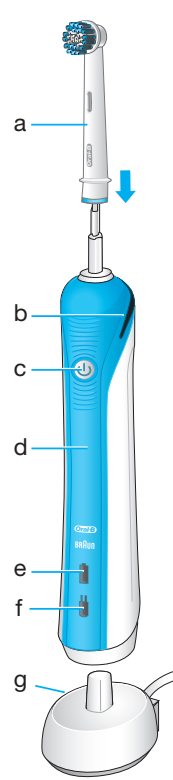
a
b
c
d
e
f
g

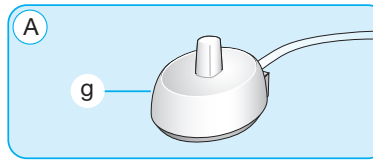
A
g

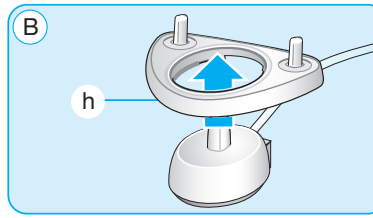
B
h

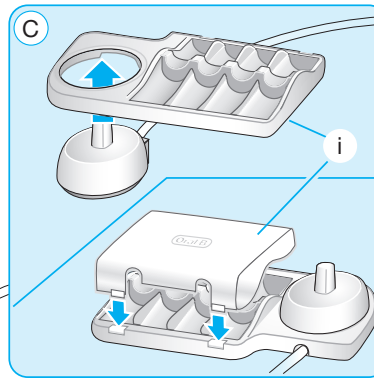
C
i

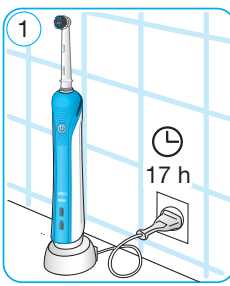
1
17 h

2

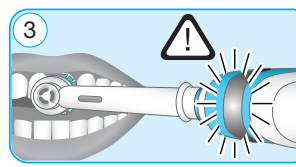
3

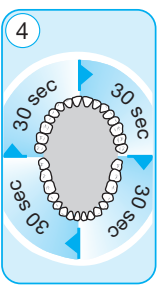
4
30 sec
30 sec
30 sec
30 sec

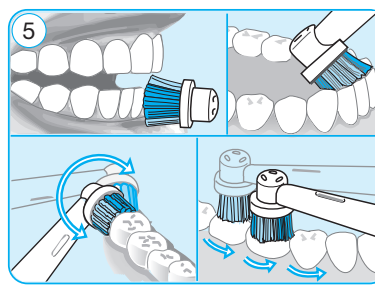
5

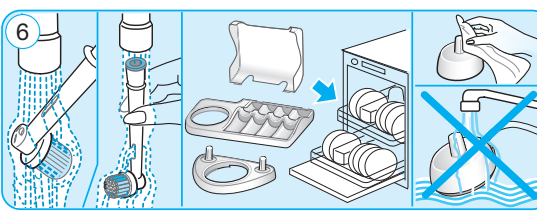
6

한국어

오랄-비® 프로페셔널 케어 는 여러분과 여러분의 가족이 독특한 칫솔질을 경험할 수 있도록 심혈을 기울여 설계되었으며, 안전하고 효과적인 제품입니다.

중요사항

- 정기적으로 코드의 손상 여부를 확인하십시오. 손상되었거나 작동되지 않는 제품은 더 이상 사용하지 마시고 대우 일렉 서비스 센터에 가지고 가십시오.
- 3세 이상의 어린이부터 사용하길 권장합니다.
- 이 제품은 안전을 위하여 보호자의 관리 감독이 없는 경우 어린아이나 심신박약자가 사용할 수 없습니다. 어린아이의 손이 닿지 않는 곳에 보관 하십시오.
- 전동칫솔 핸들이 떨어지거나 충격이 가해졌을 경우, 눈에 보이는 손상이 없더라도 칫솔모를 교체하십시오.
- 충전기를 떨어지기 쉽거나 욕조 또는 세면대에 쉽게 빠질 수 있는 장소에 보관하지 마십시오.
- 충전기를 물 또는 다른 액체 근처에 두지 마십시오.
- 물에 빠뜨린 충전기를 꺼내기 위해 손을 넣지 마십시오. 즉시 충전기의 코드를 빼십시오.
- 제품의 어떤 부분도 교환하거나 조작하지 마십시오. 이는 화재, 감전, 또는 부상을 초래할 수 있습니다. 제품 수리를 위해서는 제품 딜러 또는 대우일렉 서비스 센터로 문의 하십시오. 제품의 배터리를 교체하는 경우 외에는 제품을 분해하지 마십시오.
- 배터리 폐기를 위해 배터리를 꺼내는 경우, 배터리의 양극과 음극에 의한 누전이 일어나지 않도록 주의 하십시오.
- 제품의 틈새에 어떤 물체도 삽입하지 마십시오.
- 젖은 손으로 스마트 플러그 충전기를 만지지 마십시오. 이는 전기 충격을 일으킬 수 있습니다.
- 플러그를 뺄 때 항상 코드 대신 파워 플러그를 잡고 하십시오.
- 제품은 이 설명서에 명시된 목적에만 사용하십시오. 제조사의 추천이 없는 임의의 부착물 등을 사용하지 마십시오.
- 구강 관련 질환으로 치료를 받고 있는 경우, 제품 사용 전 전문가와 상담하시기 바랍니다.

제품 구성

a 오랄-비 프리시즌 클린 칫솔모
b 압력 센서
c On/off 작동 스위치
d 전동칫솔 핸들
e 충전 표시등
f 낮은 충전 표시등
g 충전기
h 칫솔모 꽂이
i 칫솔모 보관함

전원 연결 및 충전

이 전동칫솔은 생활방수 제품이기 때문에 전기적으로 안전하며, 욕실에서도 사용하실 수 있습니다.

- 충전기(g) 또는 조립된 충전 장치(페이지 2의 B/C 그림 참고)를 전원 콘센트에 꽂고 전동칫솔 핸들(d)을 충전기에 꽂으십시오.
- 전동칫솔이 충전되는 동안 초록색 충전 표시등(e)이 깜빡입니다. 충전이 완료되면 초록색 충전 표시등의 불빛이 5초간 표시되며 그 이후에 꺼집니다. 완전 충전에는 최소 17 시간이 소요되며 하루2번, 2분 동안 양치질 할 경우 약 1주일간 사용 가능합니다.
- 충전지 용량이 부족한 경우, 전원을 끈 후 붉은 충전 표시등(f)이 깜빡입니다. 매일 사용하시는 경우, 전동칫솔 핸들을 전원이 연결된 충전기에 놓아두시면 언제나 완전 충전된 상태에서 사용하실 수 있습니다. 과충전의 우려는 없습니다.
- 충전지의 용량을 최대화하기 위해서, 약 6개월마다 충전기의 전원을 뽑은 상태에서 정상적으로 사용하여 완전 방전을 한 후 재충전해 주십시오.

참고: 충전 표시등이 즉시 깜빡이지 않아도 계속 충전하십시오. 10–15분 내에 기호가 나타납니다.

정격전압은 충전 장치의 인쇄 내용을 참조하십시오.

전동칫솔 사용법

전동칫솔 사용 시, 시중에 판매되는 모든 치약을 함께 사용할 수 있습니다. 치약이 튀는 것을 방지하기 위하여 입안에 칫솔모를 넣으신 후 전원을 켜십시오. 치아에서 치아로 칫솔모를 천천히 이동하십시오. 다음 치아로 이동하시기 전에 칫솔모를 몇 초간 치아 하나에 머무르게 하십시오. 잇몸과 치아를 바깥쪽, 안쪽, 씹는 면의 순서로 닦으십시오. 너무 세게 누르거나 문지르지 마시고 칫솔이 움직이는 대로 두십시오.

칫솔질 모드 선택

«세정» – 뛰어난 치아와 잇몸 세정

«부드러운 세정» – 민감한 치아와 잇몸을 부드럽고 깔끔하게 세정

«미백» – 자연스러운 하얀 치아를 위한 뛰어난 미백 작용

칫솔질 모드 전환 방법:

- On/Off 작동 스위치(c)를 누르면 «세정» 모드에서 자동으로 시작됩니다.
- «부드러운 세정»과 «미백» 모드로 변경하고자 할 경우, On/Off 작동 스위치를 누르십시오.
- «미백» 모드에서 전동칫솔의 전원을 끄려면 On/Off 작동 스위치를 한번 더 누르십시오.
- «세정» 또는 «부드러운 세정» 모드에서 전동칫솔의 전원을 끄려면 모터가 멈출 때까지 On/Off 스위치를 길게 누르십시오.

압력 센서 기능

과도한 압력으로부터 치아와 잇몸을 보호하기 위해 전동칫솔에 압력 센서가 내장되어 있습니다. 과도한 압력이 가해지면 붉은 압력 센서등(b)에 불이 표시되어 적정 압력을 유지하도록 도와줍니다. 압력센서 기능이 작동되면 그 느낌이 다르며 소음 또한 줄어듦을 느낄 수 있습니다. 정기적으로 압력 센서가 제대로 작동되고 있는지 확인하기 위해 전동칫솔 사용 중 가볍게 칫솔모를 눌러 주십시오.

프로페셔널 타이머

30초마다 짧은 진동이 울려 칫솔 이동시기를 알려주고 구강 내 4구역을 모두 양치질 할 수 있도록 도와줍니다.

치과 전문의가 권장하는 칫솔질 시간인 2분이 경과하면 긴 진동이 울립니다. 칫솔질 도중 잠깐 전원이 꺼지더라도 타이머가 실제 칫솔질 시간을 기억합니다. 전원이 꺼진 후 30초가 경과하면 타이머는 초기화 됩니다.

제품을 처음 사용하는 며칠 동안은 잇몸에서 약간의 피가 날 수도 있습니다. 보통은 며칠이 지나면 출혈이 더 이상 발생하지 않습니다. 그러나 2주 이상 출혈이 지속될 경우에는 치과 전문의와 상담하십시오. 오랄–비는 치아와 잇몸이 민감한 사용자에게 «부드러운 세정» 모드 사용을 권장합니다.

칫솔모와 부속품

오랄–비 프로페셔널케어는 다양한 칫솔모와 부속품으로 구성되어 있어 사용자의 선호도에 따라 선택할 수 있도록 해줍니다.



1 오랄–비 프리시즌 클린 칫솔모
곡선모양의 칫솔모가 치아 하나하나를 감싸주어 치아 사이 깊은 곳까지 깨끗하게 닦아줍니다.

2 오랄-비 센서티브 칫솔모
(본 제품에는 포함되어 있지 않음)
오랄-비 센서티브 칫솔모는 일반 칫솔모보다 훨씬 부드러운 칫솔모를 가지고 있어 민감한 치아와 잇몸을 효과적으로 세정합니다.

3 오랄-비 프로화이트 칫솔모
(모든 모델에 해당하는 것은 아님)
오랄-비 프로화이트 칫솔모의 특수 설계된 광택 컵이 치아 표면의 커피, 차, 또는 담배로 인한 얼룩을 제거하여 자연스러운 하얀 치아로 만들어줍니다. 오랄-비 프리시즌 클린 칫솔모의 뛰어난 회전식 세정 작용과 특수 광택 컵이 결합되어 자연스러운 하얀 치아를 만들어 줍니다.

오랄-비 프로화이트 칫솔모는 교정기 착용시에 사용하지 않는 것이 좋습니다. 오랄-비 프로화이트 칫솔모는 12세 이하의 어린이에게 권장하지 않습니다.

모든 칫솔모에 포함되어 있는 인디케이터® 칫솔모는 칫솔모 교체 시기를 알려줍니다. 하루 2회, 2분간 양치질을 할 경우 인디케이터 칫솔모의 푸른 색이 약 3개월 후에 반쯤 사라집니다. 이때 칫솔모를 교체해주시기 바랍니다.

오랄-비 프로페셔널케어 칫솔모와 부속품은 오랄-비 매장에서 구입하실 수 있습니다.

올바른 관리 방법

- 칫솔질 후 전동칫솔 전원을 끄고 흐르는 물에 칫솔모 또는 부속품을 깨끗이 헹구십시오.
- 핸들에서 칫솔모 또는 부속품을 분리한 후 흐르는 물로 전동칫솔 핸들과 칫솔모를 별도로 세척하십시오. 이를 건조시킨 후 전동칫솔 핸들을 충전기에 꽂으십시오.
- 충전 장치를 세척하기 전에 먼저 분리하십시오. 충전 장치는 절대 식기 세척기로 세척하지 마시고 젖은 헝겊으로 닦아 주십시오.
- 칫솔모 보관함 및 보호 커버는 모두 식기 세척기로 세척할 수 있습니다.

본 사용 설명서는 예고 없이 변경될 수 있습니다.

환경 보전을 위한 주의사항

이 제품에는 충전지가 포함되어 있습니다. 이 제품을 폐기 처리할 경우 환경 보존을 위해 생활 쓰레기로 분류하지 마십시오.
다 쓴 충전지는 가까운 대우일렉서비스 센터에 가지고 가시거나 환경보호법에 의거하여 승인된 재활용 또는 폐기장소에 버리십시오.

품질보증

- 본 제품은 구입일로부터 1년간 품질을 보증합니다.
- 1년간의 품질 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
- 보증기간 내에라도 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모, 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.
- 대우일렉서비스 센터가 아닌 다른 곳에서 수리를 하였거나 오랄-비 정품이 아닌 부품을 사용하였을 경우에는 품질보증대상에서 제외됩니다. 그리고 본 제품의 구입일자가 판매점에 의해 혹은 구입시의 영수증에 의해 확인되어야만 정상적인 품질 보증품으로 인정됩니다. (구입시 영수증을 잘 보관하시어 애프터 서비스 시 불이익이 없도록 하십시오.)

본 제품은 소비자분쟁해결기준에 따라 보상 받을 수 있습니다.
A/S 문의 : 1588-1588
가까운 대우 일렉 서비스 센터에서 A/S를 받으실 수 있습니다.

브라운제품:
전국 유명 백화점, 할인점, 양판점 및 전자상가에서 구입할 수 있습니다.
http://www.braun.com
http://www.braun.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
아래 기재된 내용으로 품질을 보증합니다.

제 품 명			모 델 명		
구 입 일			보증기간		구입일로부터 1년
고 객			판 매 점		

한국 피앤지 판매 (유)
서울 특별시 강남구 역삼동 679-4 16층
전화: (080-333-5000) (수신자부담)

English

Oral-B® Professional Care® has been carefully designed to offer you and your family a unique brushing experience that is both safe and effective.

IMPORTANT

- Periodically check the cord for damage. If the cord is damaged, take the charging unit to an Oral-B Braun Service Centre. A damaged or non-functioning unit should no longer be used.
- This product is not intended for use by children under age three.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- If the product is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Do not place or store the charger where it can fall or be pulled into a tub or sink.
- Do not place the charger in water or other liquid.
- Do not reach for a charger that has fallen into water. Unplug immediately.
- Do not modify or repair the product. This may cause fire, electric shock or injury. Consult your dealer for repairs or contact an Oral-B Braun Service Centre. Do not disassemble the product except when disposing of the battery.
- When taking out the battery for disposal, use caution not to short the positive (+) and negative (–) terminals.
- Do not insert any object into any opening of the appliance/ charger.
- Do not touch the power plug with wet hands. This can cause an electric shock.
- When unplugging, always hold the power plug instead of the cord.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.

Description

a Oral-B Precision Clean brush head
b Pressure sensor light
c On/off button (mode selection)
d Handle
e Charge indicator light
f Low charge indicator light
g Basic charger
h Brush head holder (depending on model)
i Brush head compartment with protective cover (depending on model)

Connecting and charging

Your toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.

- Plug the basic charger (g) or the assembled charging unit (see picture B/C, page 2) into an electrical outlet and place the toothbrush handle (d) on the charging unit.
- The green charge indicator light (e) flashes while the handle is being charged, once it is fully charged, the green charge indicator light shines continuously for 5 seconds and then it turns off. A full charge takes at least 17 hours and enables approximately one week of regular brushing (twice a day, 2 minutes).
- When the rechargeable battery is low, the red low charge indicator light (f) starts blinking after turning off.
- For everyday use, the toothbrush handle can be stored on the charging unit to maintain it at full power. Overcharging is impossible.

- To maintain the maximum capacity of the rechargeable battery, unplug the charging unit and fully discharge the handle with regular use at least every 6 months.

Please note: If the charge indicator light is not flashing immediately, continue charging. It will appear in 10–15 minutes.

Specifications
For voltage specifications refer to the bottom of the charging unit.

Using your toothbrush

Wet brush head and apply toothpaste; you can use any kind of toothpaste. To avoid splashing, guide the brush head to your teeth before switching on the appliance (c). Guide the brush head slowly from tooth to tooth, spending a few seconds on each tooth surface. Start brushing the outsides, then the insides, finally the chewing surfaces. Brush all four quadrants of your mouth equally.

Brushing modes (depending on model)

«Daily Clean»	–	Exceptional mouth cleaning.
«Sensitive»	–	Gentle, yet thorough cleaning for sensitive areas.
«Whitening»	–	Exceptional whitening for occasional or everyday use.

How to switch between modes:
- When pressing the on/off button your toothbrush automatically starts in the «Daily Clean» mode.
- To switch to the «Sensitive» and «Whitening» mode, successively press the on/off button.
- To turn off your toothbrush from the «Whitening» mode, push the on/off button once more.
- If you wish to turn off your toothbrush from the «Daily Clean» or «Sensitive» mode, push and hold down the on/off button until the motor stops.

Pressure Sensor
Protecting your teeth and gums from hard brushing, your toothbrush has a pressure control feature installed. If too much pressure is applied, the red pressure sensor light (b) will light up reminding you to reduce pressure. In addition you will also hear a different sound while brushing. Periodically check the operation of the pressure sensor by pressing lightly on the brush head during use.

Professional Timer
A short stuttering sound at 30-second intervals reminds you to brush all four quadrants of your mouth equally.

A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time. The elapsed brushing time is memorised when the handle is briefly switched off during brushing. When pausing longer than 30 seconds the timer resets.

In the first few days of using your electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and gums, Oral-B recommends using the «Sensitive» mode optional in combination with the Oral-B Sensitive brush head.

Individual brush heads and accessories

The **Oral-B Professional Care** offers you a variety of brush heads and accessories, allowing you to select those, which best meet your individual needs.



1 Oral-B Precision Clean brush head
The Oral-B Precision Clean brush head cups each tooth with a curved bristle trim and reaches deep between teeth at the same time.

2 Oral-B Sensitive brush head
(not with all models)
The Oral-B Sensitive brush head provides thorough cleaning for sensitive teeth and gums. It has an extra soft bristle texture that is gentle on teeth and gums.

3 Oral-B ProWhite brush head
(not with all models)
The Oral-B ProWhite brush head is specifically designed to polish and naturally whiten your teeth by removing surface stains that can come from coffee, tea and tobacco. It features the oscillating-rotating head action of the Oral-B Precision Clean brush head to effectively clean teeth, combined with the special polishing cup for natural brightening.

We do not recommend using the Oral-B ProWhite brush head with braces. Children under 12 years old should not use the Oral-B ProWhite brush head.

All three brush heads feature blue INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the blue color will fade halfway approximately within 3 months, signalling it is time to change the brush head.

Oral-B Professional Care replacement brush heads and accessories are available in stores that sell Oral-B products.

Cleaning recommendations

- After brushing, rinse your brush head or accessory carefully under running water with the handle switched on.
- Switch off and remove the brush head or accessory. Clean both parts separately under running water then wipe them dry before reassembling the toothbrush.
- Disassemble charging unit before cleaning. Never place the charger in dishwasher or water; it should be cleaned with a damp cloth only.
- Brush head holder, brush head compartment and protective cover are dishwasher-safe.

Subject to change without notice.

Environmental Notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at an Oral-B Braun Service Centre or at appropriate collection points provided in your country

Guarantee
We grant 1 year limited guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Oral-B Braun Service Centre.